



1  
M501

## AHU HOT WATER REHEAT COIL PIPING

SCALE: NONE

- 1 FOR P/T PORT, USE PRESSURE TAP PROVIDED BY MANUFACTURER AT COIL IF AVAILABLE.
- 2 INSTALL EXTENSION AT PRESSURE TAP SO P/T PORT IS AT LEVEL OF INSULATION.
- 3 3/4 INCH THREADED HOSE CONNECTION AND CAP.
- 4 PROVIDE MANUAL AIR VENTS AT ANY HIGH POINT IN SUPPLY AND RETURN BETWEEN COIL AND MAIN.
- 5 LOCATE SHUT-OFF VALVES, UNIONS AND FLANGES TO ALLOW CLEAR SPACE FOR REMOVAL OF COIL.
- 6 PROVIDE BALANCE VALVE IN HWR OF EACH COIL FOR MULTIPLE COIL ARRANGEMENT. (NOT REQUIRED IF ONLY ONE COIL)